



**CamScan**  
0500 335722

## CS 110 TEXTWRITER2 INSTRUCTIONS

The CS110 Textwriter2 is mounted on the slide out tray within the system. It comprises two component parts.

1. A black box of electronics mounted to the rear of the tray which overlays text onto the video signal.
2. A small P/S2 keyboard similar to that of a personal computer to allow text input.

By using a combination of keyboard commands (below) it is possible to setup 16 pages of text which is stored within the battery backed memory and can be displayed at the appropriate time in the video recording to indicate faults and comments. The first two pages could be setup to display your or the customers address etc...

The function of the text writer is split into three sections:-

'NORMAL MODE'	Displaying text and going to Text Edit mode and Time setup
'TEXT EDIT MODE'	Editing text prior to recording
'TIME & DATE SET MODE'.	Setup onboard time and date

### NORMAL MODE

F1	Enter "Text Edit Mode".
F2	Enter "Time & Date Set Mode"
F3	Time & Date. On/Off Toggle
1-9,0 & QWERTY	Display Page 0,1,2,3,4,5,6,7,8,9,Q,W,E,R,T,Y ( 16 Pages)
Arrow keys < >	Adjust horizontal position of screen
SPACE	Remove displayed text from screen.
INS	Toggles between Insert and Overwrite

To display text say page 1 press the number key '1' page one's contents are displayed. To remove press SPACE bar.

Note - page 10 is the '0' number and pages 11-16 are Q thru' W.

TEXT EDIT MODE - 'Press 'F1' see above

Edit screen text using keyboard as normal. Note arrow keys move cursor to desired position in edit mode..

ESC Exit Text Edit Mode.

On exiting 'TEXT EDIT MODE' the edited text can be saved by pressing 'ENTER' or if 'ESC' is pressed at this point the modifications are lost.

TIME & DATE SET MODE - 'Press F2' see above. Battery backup maintains Time & Date when power is off.

ESC	Exit 'time & date set mode' without saving.
ENTER	Save current time & date values, and exit time & date set mode.
UP / DOWN Arrow key	Increment/Decrement current value at cursor.
LEFT/RIGHT Arrow key	Move flashing cursor Left/Right

To replace battery remove text writer tray from system unit. Unscrew 4 screws from lid of the black box replace the coin cell battery with a CR1616 or equivalent. IF IN DOUBT CONTACT OUR TECHNICAL SUPPORT NUMBER.

# TECHNICAL 0500 335722

UK SYSTEMS INC LTD. 1A GRANTHAM ROAD BINGHAM NOTTINGHAM NG13 8BX. TEL:-01949 877770 FAX:- 01949 877771.

C. UK SYSTEMS INC LTD. 2002.